

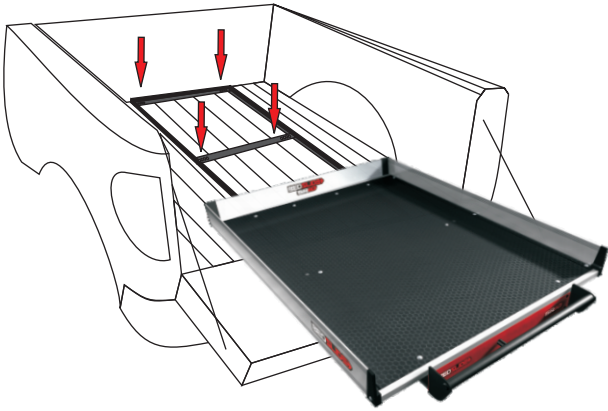


1. CENTER BEDSLIDE AND DRILL PILOT HOLES FOR RIV NUTS

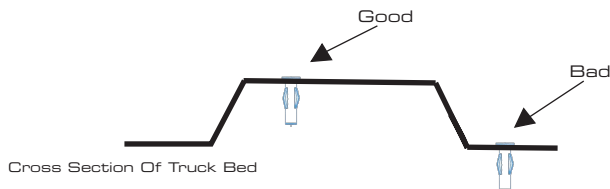

2. INSTALL RIV NUTS AND BOLT DOWN THE BEDSLIDE

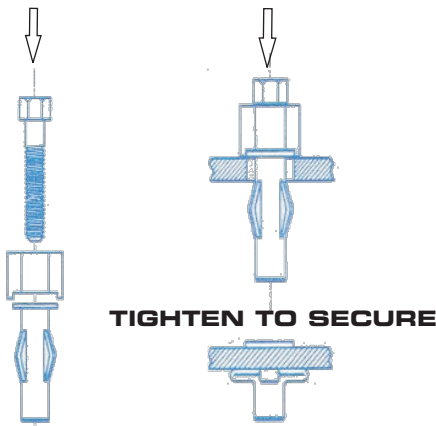

BEDSLIDE INSTALLATION DETAILS

INSTALLATION KIT INCLUDES

(4) Riv Nuts, (4) 5/16 x 1 1/2 bolts, (1) Riv Nut Tool, (4) 5/16 split lock washers

Tools Needed

Drill, 1/2" drill bit, felt pen, tape measure, 1/2" wrench or socket, 7/8 wrench.

BEDSLIDE placement and pilot holes

·Place BEDSLIDE into truck and center between the wheel wells. Now push the BEDSLIDE forward toward the bulkhead, leave a small space to allow the BEDSLIDE to lock in the closed position. Once the BEDSLIDE is properly centered, double check to verify that the tailgate will close.

·Once placement is set, slide the top tray out carefully to mark and drill two holes in the cross member closest to the cab and 2 holes in the center cross member using the pre-punched holes. (If you have a long bed with two center cross members, use the cross member closer to the tailgate)

· **Before you drill, check under vehicle for spare tires, fuel tank, electrical lines, or any other obstructions.**

·Drill the 4 holes through the truck bed using 1/2" drill bit.

Install Riv Nuts and bolt down BEDSLIDE.

·Move BEDSLIDE and install Riv Nuts before installing the BEDSLIDE.

·Insert Riv Nuts into drilled holes. Place Riv Nut tool over head of Riv Nut, insert 5/16" x 1 1/2 mounting bolt, thread down tight into tool. Using 7/8 wrench secure Riv Nut tool while using 1/2" socket to tighten bolt and draw up Riv Nut under truck bed. Once tight remove bolt.


·Move BEDSLIDE back over Riv Nuts and bolt the BEDSLIDE down.

·Do not over tighten bolts. They may cause undue stress on cross members and truck bed ribs. **Do not use air impact tools with Riv Nut bolts.**


Your BEDSLIDE is now installed. GET TO IT!

www.BEDSLIDE.com | 888.807.0099

1. Loosen the 4 deck bolts near the headboard.
(See Fig 1)

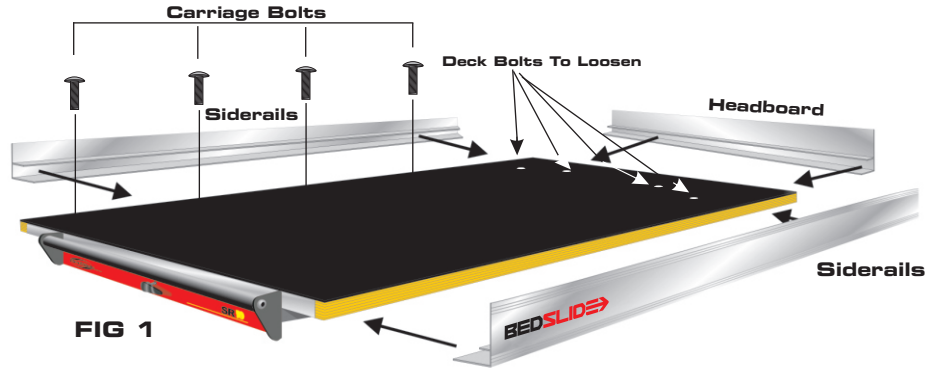

2. Slide headboard between deck and frame. Then tighten deck bolts (See Fig 2)

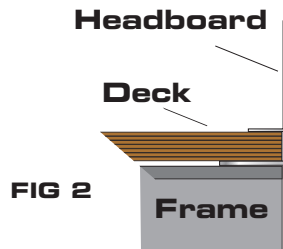

3. Slide siderails onto deck and insert carriage bolts from the top down through the pre-drilled holes, thread and tighten nuts.
(See Fig 1)

4. Once siderails are firmly installed. Slide plastic end caps and corner caps into place.
(See Fig 3)



5. Use self drilling screws supplied to fasten end caps and corner caps firmly into place. Make sure that the screws go through the caps into plywood deck.
(See Fig 4)



Congratulations! You are now ready to install your new Bedslide.